

Rolleimarin JW2

Compatible Camera models

AGFA	1	100	102	1338mT	1438m	2030m	2338mT	AP sensor 505-D
	DC733i	DC830i	DC733s	DC833m				
AIGO	F100	P1	T30	T35	T60	* T1000	T1028	T1068
	T1200	T1258	T1260	V68	V80	V500	V630	V700
	V720	V728	V740	V760	V780	V800	V830	V860
	V866	V880	V890	V1000	V1018	V1080		
BENQ	C520	C530	C630	C750	C840	C850	C1020	C1060
	C1220	C1230	C1250	C1255	E510	E520	E605	E720
	E800	E820	E1000	E1020	E1030	E1035	E1040	E1050
	E1050t	E1220	E1230	L1020	L1050	T700	T800	T850
	X600	X710	X720	X725	X835	W1220		
CANON	A3000	A3100	IXUS30	IXUS40	IXUS50	IXUS55	IXUS60	IXUS65
	iXUS70	IXUS75	IXUS80 IS	XUS85IS	IXUS90IS	IXUS95	IXUS100IS	IXUS105IS
	IXUS110IS	IXUS120IS	IXUS130	IXUS200IS	IXUS400	IXUS430	IXUS500	IXUS700
	IXUS750	*IXUS800IS	*IXUS950IS	*IXUS970IS	IXUS850IS	IXUS860IS	IXUS870IS	IXUS900TI
	IXUS960IS	IXUS980IS	IXUS990IS	IXUS IIs	IXUS II	IXUS Wireless	IXY10	IXY20IS
	IXY25IS	IXY60	IXY80IS	IXY95IS	IXY110IS	IXY210IS	IXY220IS	IXY510IS
	*IXY810IS	*IXY820IS	IXY830IS	IXY910IS	IXY920IS	IXY930IS	IXY2000IS	IXY3000IS
	IXY L4	IXUS i	IXUS i5	IXUS i7	IXUS i7 Zoom	S85	S90	S95
	SD20	SD40	SD100	SD200	SD300	SD450	SD600	SD630
	SD750							
SD770	SD790	SD800 IS	*SD850 IS	SD890	SD980IS	SD1100	S410	
CASIO	FC100	FC150	S5	S7	S10	S12	S100	S500
	S600	S770	S880	Z1	Z2	Z3	Z4	Z5
	Z6	Z7	Z8	Z9	Z10	Z11	Z19	Z20
	Z29	Z30	Z33	Z35	Z40	Z50	Z55	Z57
	Z60	Z65	Z70	Z75	Z77	Z80	Z85	Z90
	Z100	Z110	Z120	Z150	Z200	Z250	Z270	Z280
	Z300	Z330	Z400	Z450	Z500	Z550	Z600	Z700
	Z750	Z850	Z1000	Z1050	Z1080	Z1200	Z1200SR	

Rolleimarin JW2

Compatible Camera models

FUJIFILM	A100	A150	A170	A175	A220	A225	A400	A500
	AV105	AX205	F10	F11	F20	F30	F31	F75
	F85	F450	F455	F460	F470	F480	F200EXR	F31fd
	F40fd	F47fd	F50fd	F60fd	F100fd	F100pol	FX70 EXR	J10
	J20	J25	J26	J27	J30	J35	J50	J100
	J120	J250	JX200	JX255	JZ500	JZ505	J15fd	J110W
	J150W	V10						
GENERAL ELECTRIC	A735	A835	A950	A1050	A1200	A1230	A1235	A1250
	A1255	A1455	C1033	C1233	E840S	E850	E1050	E1055W
	E1240	E1250W	E1255W	E1480W	E1486TW	J1050	J1250	J1455
HAIER								
	T70	V80	V1080	V1082	V1280T	X80		
KODAK	C180	C190	C763	C913	C1013	M320	M340	M341
	M380	M420	M530	M550	M575	M580	M753	M763IS
	M853	M863IS	M872	M873	M883	M893 IS	M1033	M1063 IS
	M1073IS	M1093IS	M2008	V550	V603	V1073	V1273	V530 Zoom
	V550 Zoom							
LEICA	*C-Lux 1	*C-Lux 2	*C-Lux 3					
NIKON	L2	L3	L6	L10	L11	L12	L14	L19
	L20	L22	S200	S210	S220	S230	S500	S510
	S520	S550	S560	S570	S600	S610	S620	S630
	S640	S700	S710	S4000	S6000			
OLYMPUS	FE20	FE26	FE46	FE47	FE130	FE140	FE150	
	FE160	FE180	FE190	FE200	FE210	FE220	FE220D	FE230
	FE240	FE250	FE280	FE290	FE300	FE320	FE330	FE340
	FE350	FE360	FE370	FE3000	FE3010	FE4000	FE4010	FE4020
	FE4030	FE4040	FE5000	FE5010	FE5030	FE5500	μ700	μ710
	μ740	μ750	μ760	μ780	μ810	μ820	μ830	μ840
	μ1000	μ1010	μ1020	μ1200	μ1201	μ1060	μ5000	μ5010

Rolleimarin JW2

Compatible Camera models

PANASONIC	*FS1	*FS2	*FS3	*FS5	*FS6	*FS7	*FS10	*FS11
	*FS12	*FS15	*FS20	*FS25	*FS42	*FS62	*FX01	*FX2
	*FX3	*FX07	*FX7	*FX8	*FX9	*FX10	*FX12	*FX30
	*FX33	*FX35	*FX36	*FX37	*FX38	*FX40	*FX48	*FX50
	*FX55	*FX60	*FX65	*FX100	*FX150	*FX180	*FX500	*FX520
	*FX550	*FX580	*LS5	*SV ME750	*ZS1			
PENTAX	A10	A20	A30	A36	A40	E40	E50	E60
	E65	E70L	H90	L36	M10	M20	M30	M40
	M50	M60	M70	M85	P70	S5i	S5n	S5z
	S4	S6	S7	S10	S12	S30	S40	S45
	S50	S55	S60	T20	T30	V10	V20	Svi
POLAROID	i737	i834	T830					
PREMIER	DC67	DC68	DC87	DC593	DC6360	DC6370	DC6371	DM6365
	DM7362	DM7365	DS7450	DSA350	ES6	SL4	SL5	SL8
	SL53	SL58	SL63	SL68	SL83	SL86	SL1000	
RICOH	R1	R1V	R2	R2s	R3	R5	R6	R30
	R40	R50	RR730	RR750				
ROLLEI	CL 50	CL 55	CL52	SL50	SL60	CL101	CL202	CL110
	CL130	FL100	CL122	CL200	FL200	CL202	CL230	CL350
	CL203	CL 302	CL 320	CL 312	CL360TS	CL370TS	CL412	CL390SE
	PF450	PF 440	RCP-6324	RCP-5324	RCP-7325	CL51	RCP7330	RCP-7430
	RCP-7324	RCP-7325	X720	RCP-8325	RCP-8427XW	RCP-8325XS	X-8	RCP-8330
	X-8 sport	S-8E	XS-8	CL81	CL82	CL90	SL90	RCP-10325
	XS-10	S-10	CL150	FL140	CL101	CL102	CL103	CL120

Rolleimarin JW2

Compatible Camera models

SAMSUNG	CL5	D75	D860	ES10	ES15	ES17	ES20	ES55
	ES60	ES70	IT100	*M310	L60	L70	L210	L301
	L100	L201	L700	L730	L830	PL50	PL51	PL55
	PL60	PL65	PL70	PL150	PL502	S1070	SL102	SL202
	SL620	S760	SL720	SL820	ST45	ST500	ST550	ST60
	TL100	TL220	TL225	TL320	WB100	WB1000		
SANJO	E7	E10	E760	E1000	E1090	S6	S7	S870
	S880	S1070	S1080	S1275	T700	T1060	X1250	
SONY	N1	N2	S650	S700	S730	S780	S930	S950
	S980	WX1	W30	W35	W50	W55	W70	W80
	W85	W90	W100	W110	W120	W130	W150	W180
	W190	W200	W210	W230	W270	W290	W300	W310
	W320	W350	W380	W390				
YASHICA								
	EZF1233	EZ8032	EZF8321					

* The on/off button of the camera model is slide switch type, user is required to pre-set the camera at Power Saving Mode before putting the camera in underwater housing.