

# INON

## INON Grip Base D4 Compatibility Chart

This chart provides necessary information when you attach 「D Base・SPS」 (component part of the 「Grip Base D4」) on a housing. Please find your camera/housing in the chart to check which pattern (1 - 7), screw hole (A or B) you have to use and if you need to use the spacer or not. Please refer to 「Grip Base D4」 user manual for installation method.

- Glossary: “Pattern” Combination pattern of Main Plate/Sub Plates to suit to each housing.  
 Ex) Olympus C-200Z + PT-009 → Main Plate/Sub Plates has to be recombined to **【Pattern 3】**
- “Screw Hole” Indicates which screw hole (A or B) to use when fasten Sub Plates with cap screws.  
 Ex) Olympus C-200Z + PT-009 → Screw Hole **【A】**
- “Spacer” Indicates if your housing needs to use the Tripod Screw Spacer or not.  
 Ex) Olympus C-200Z + PT-009 → **【X】** means Tripod Screw Spacer is **【Not necessary】**
- “M.B.” Compatible Mount Base type (AD, 28AD, M67)

### Compatibility Chart

Mfr	Camera	Housing	Pattern	Screw Hole	Spacer	M.B.	RMK
Olympus	C-200Z,C-300Z	PT-009	3	A	X	AD	
	C-2020Z,C-2040Z,C-3000Z, C-3030Z,C-3040Z,C-3100Z, C-4040Z,,C-4100Z	PT-010	1	A	X		
	C-40Z	PT-012	1	B	X	AD/M67	
	X-1,X-2	PT-014	1	B	X	AD/M67	
	C-5050Z	PT-015	1	A	X		
	μ-10,μ-15,μ-20 μ-25,μ-30	PT-016	1	B	X	AD	
	C-740UZ,C-745UZ,C-750UZ C-755UZ	PT-018	1	B	X		
	C-5060WZ	PT-020	1	A	X	28AD	
	C-760UZ,C-770UZ	PT-022	1	A	X		
	C-8080WZ	PT-023	1	B	X		
	X-3	PT-024	1	B	X	AD	
	μ-40	PT-026	1	B	X	AD	
	C-7070WZ	PT-027	1	B	X	28AD	
	μ600	PT-029	1	B	X	AD	
	SP-350	PT-030	1	B	X	AD	
	SP-700	PT-031	1	B	X	AD	
	μ710	PT-032	1	B	X	AD	
	μ720SW,μ725SW	PT-033	1	B	X	AD	
	μ750	PT-034	1	B	X	M67	
	μ770SW,μ795SW	PT-035	1	B	X	AD	
	μ760	PT-036	1	B	X	AD	
	SP-550UZ/560UZ	PT-037	1	A	X		
	μ780,μ830	PT-039	1	B	X	M67	
	μ790SW,μ850SW	PT-041	1	B	X	AD	
	μ1020	PT-042	4	B	X	M67	
	μ1030SW	PT-043	1	B	X	28AD	
	FE-360	PT-044	5		X	AD	
	μ TOUGH-8000	PT-045	1	B	X		
	FE-3010	PT-046	5		X		
	μ TOUGH-6000	PT-047	1	B	X		

Fujifilm	Finepix F710,F810	WP-FX701	5		X	AD	
	Finepix F10,F11	WP-FXF10	1	B	X	AD	
	Finepix F30,F31fd	WP-FXF30	5		X	AD	
	Finepix F40fd	WP-FXF40	5		X	AD	
	Finepix F50fd	WP-FXF50	5		X	AD	
	Finepix F100fd	WP-FXF100	5		X		
	Finepix F200EXR	WP-FXF200	5		X		
Finepix Z100fd,Z200fd, Z250fd	WP-FXZ100	5		X			

Sony	DSC-P100, P150	MPK-PHB	1	B	X	AD	
	DSC-W1, W5, W7	MPK-WA	6	B	X	AD	
	DSC-N1, N2	MPK-NA	1	B	X	AD	
	DSC-W170, W300	MPK-WD	1	B	X	M67	
	DSC-T700, T77	MPK-THG	7	B	X	AD	

Nikon	E2200, E3200, E4100	WP-CP1	1	B	X	AD	
	E4200, E5200	WP-CP2	1	B	X	AD	
	E7900, E5900	WP-CP4	1	B	X	AD	

※INON confirms compatibility based on camera/housing model available in Japan.

Mfr	Camera	Housing	Pattern	Screw Hole	Spacer	M.B.	RMK
Panasonic	DMC-FX01, FX07	DMW-MCFX01	2	B	X	28AD	
	DMC-FX01, FX07, FS1, FS2	DMW-MCFX07	2	B	X	28AD	
	DMC-FX30, FX33	DMW-MCFX30	2	B	X	28AD	
	DMC-FX35, FX37	DMW-MCFX35	2	B	X	28AD	
	DMC-FX40	DMW-MCFX40	2	B	X	28AD	
	DMC-FS3, FS5	DMW-MCF55	2	B	X	28AD	
	DMC-TZ3	DMW-MCTZ3	2	B	X		
	DMC-TZ5	DMW-MCTZ5	2	B	X		
	DMC-TZ7	DMW-MCTZ7				X	
	DMC-FT1	DMW-MCFT1	2	B	X		

Canon	IXY D300	WP-DC100	1	B	X	AD/M67	※
	PowerShot A10, A20	WP-DC200	1	A	X	AD/M67	
	PowerShot A10, A20,A30,A40	WP-DC200s	1	A	X	AD/M67	
	PowerShot S30, S40, S45, S50	WP-DC300	1	A	X	AD/M67	
	IXY D300a	WP-DC500	1	B	X	AD/M67	※
	PowerShot A60, A70	WP-DC700	1	B	X	AD	※
	IXY D400, IXY D450, IXY D500	WP-DC800	1	B	X	AD	※
	PowerShot A80	WP-DC900	1	B	X	AD	※
	PowerShot S1 IS	WP-DC20	1	B	X	M67	※
	PowerShot A75, A85	WP-DC30	1	B	X	AD	※
	PowerShot S60, S70	WP-DC40	1	B	X	28AD	※
	PowerShot A95	WP-DC50	1	B	X	AD	※
	IXY D600	WP-DC70	1	B	X	AD	※
	IXY D700	WP-DC80	1	B	X	AD	※
	PowerShot S80	WP-DC1	1	B	X	28AD	
	PowerShot A540	WP-DC2	1	B	X	AD	
	IXY D80	WP-DC3	1	B	X	AD	
	IXY D70	WP-DC4	1	B	X	AD	
	IXY D800IS	WP-DC5	1	B	X	AD	※
	IXY D1000	WP-DC7	1	B	X	AD	※
	IXY D900IS	WP-DC9	1	B	X	28AD	
	PowerShot G7	WP-DC11	1	A	X		
	PowerShot A570IS	WP-DC12	1	B	X	AD	
	IXY D10	WP-DC13	1	B	X	AD	
	IXY D90	WP-DC14	1	B	X	AD	
	IXY D810IS	WP-DC15	1	B	X	AD	※
	IXY D910IS	WP-DC17	1	B	X	28AD	
	PowerShot A650IS	WP-DC18	1	A	X		
	IXY D2000IS	WP-DC19	1	B	X	AD	※
	PowerShot G9	WP-DC21	1	A	X		
	IXY D20IS	WP-DC22	1	B	X	AD	
	IXY D25IS	WP-DC23	1	B	X	AD	
	IXY D95IS	WP-DC24	1	B	X	AD	
	IXY D920IS	WP-DC26	1	B	X	28AD	
	IXY D3000IS	WP-DC27	1	B	X	AD	※
	PowerShot G10	WP-DC28	1	A	X		
IXY D110IS	WP-DC29	1	B	X			
IXY D210IS	WP-DC31	1	B	X			
IXY D510IS	WP-DC32	5		O			

※Side of Sub Plate's protruded part is attached on round part of housing outer exterior.  
 DO NOT press Sub Plates too hard towards to a housing.

INON Inc.

2-18-9, Dai, Kamakura,  
 Kanagawa 247-0061 JAPAN

E-mail [support@inon.co.jp](mailto:support@inon.co.jp)

Fax. +81(0)467-48-2178

URL <http://www.inon.co.jp/>

March 2009