

Sigma / Tokina LENS - PORT - CHART 2014/2

Sigma Lens (APS-C sensor = DC)		Zoom Gear operated with man. Focus control SUBAL F5/N10/N80 SUBAL D10/FS2 SUBAL ND2/ND20	Zoom Gear operated with man. Focus control SUBALND3/ND30/ ND90/ ND300/ SUBALND600/ND7000 ND7100/ ND800/810	Zoom Gear operated with man. Focus control SUBAL C40/C50	Zoom Gear operated with man. Focus control SUBAL CD3/CD4 CD5MII/CD5MIII CD500/CD7
Sigma 8-16 / 4.5-5.6 DC HSM	DP-FE + EXR-45	4ZNS359 4ZNS859	4ZNS359 4ZNS859		
Sigma 10-20 / 4.5-5.6	DP-FE + EXR-40 DP-SWB + EXR-33 Ø inside=88mm!	4ZNS61 (also in ND70)	4ZNS61	4ZCS61	4ZCS861
Sigma 10-20 / 3.5 EX DC	DP-FE3 + EXR-50S3 DP-FE4 + EXR-50	4ZNS328	4ZNS328 4ZNS828		
Sigma 12-24 / 4.5-5.6 EX DG Asp. HSM	DP-FE3 + EXR-50S3 DP-FE4 + EXR-50/4 VIGNETTING! Necessary to remove or modify Shade		operated with focus cog gear directly on the lens rubber barrel or 4ZNS860	operated with focus cog gear directly on the lens rubber barrel or 4ZCS860	4ZCS860
Sigma AF 12-24 / 4.5 - 5.6 II DG Asp. HSM	DP-FE3 + EXR-50S3 DP-FE4 + EXR-50/4		4ZNS826	4ZNS826	4ZNS826
Sigma 15-30 / 3.5-4 EX	DP-FE + EXR-66	4ZNS25	4ZNS25 identical!		
Sigma 17-50 / 2.8 EX DC OS HSM	DP-FE4 + EXR-33		4ZNS870		
Sigma 17-70 / 2.8-4.5 DC Zoom barrel rubber Ø69,9mm	DP-FE + EXR-33	4ZNS62 (also in ND70)	4ZNS62 identical!	4ZNS62	
Sigma 17-70 DC / 2.8-4.5 Macro "HSM" Nikon version Zoom barrel rubber Ø78,1mm	DP-FE + EXR-33	Possible gear must be checked in each housing separately!	4ZNS865 4ZNS7865 (in ND70)		
Sigma 17-70 DC / 2.8-4 Macro OS "HSM" Nikon version Zoom barrel rubber Ø78,35mm	DP-FE + EXR-40		4ZNS867		
Sigma 17-70 /2.8-4 DC Macro (OS)* HSM C Contemporary Zoom barrel rubber Ø tbd	DP-FE + EXR-40		4ZNS868		
Sigma 18-50 / 3.5-5.6 DC D	DP-FE + EXR-??	4ZNS63 (also in ND70)			
Sigma 18-50 / 2.8 EX macro Zoom barrel rubber Ø69,9mm	DP-FE + EXR-20	4ZCS66	4ZCS66	4ZCS66	4ZCS866
Sigma 18-50 / 2.8 EX macro "HSM" Zoom barrel rubber Ø78mm Nikon version	DP-FE + EXR-20	4ZNS866			
Sigma 20-40 / 2.8 IF EX DG	DP-FE3+EXR70S3 DP-FE4+EXR70/4 full size chip: DP-SWB+EXR50S3 normal chip: DP-SWB+EXR40S3	4ZNS69	4ZNS69 identical!		
Sigma AF 24-70 2.8 EX DG ASPH	DP-FE2 + EXR100 DP-SWB + EXR70	4ZNS33			
Sigma AF 24-70 / 3.5-5.6 ASPH. UC	DP-FE + EXR33 DP-SWB + EXR15 DP-SWC	4ZNS09 in ND20	4ZNS09		
Sigma 28-70 / 2.8 EX DG	DP-FE + EXR-33	4ZNS64	4ZNS64 identical!		
Sigma 17-35mm D/ 1:2,8-4 EX			4ZNS831 4ZNS031		

Sigma Lens		Focus Gear operated with man. Focus control <i>SUBAL F5/N10/N80</i> <i>SUBAL D10/FS2</i> <i>SUBAL ND2/ND20</i>	Focus Gear operated with man. Focus control <i>SUBALND3/ND30/</i> <i>ND90/ ND300/</i> <i>SUBALND600/ND7000</i> <i>ND7100/ ND800/810</i>	Focus Gear operated with man. Focus control <i>SUBAL C40/C50</i>	Focus Gear operated with man. Focus control <i>SUBALCD3/CD5MIII</i> <i>CD5MIII</i> <i>SUBALCD500/CD7</i>
Sigma AF 10 / 2.8 EX DC HSM	DP-FE + EXR-13	4FNS327	4FNS327 4FNS827		
Sigma AF 15 / 2.8 D EX	DP-FE	4FNS25	4FNS325 4FNS825		
Sigma AF 15 / 2.8 D EX APS-C + APS-H sensor	DP-100 + EXR15	4FNS25	4FNS325 4FNS825		
Sigma AF 15 / 2.8 D EX Full frame sensor		4FNS25	4FNS325		
Sigma AF 20 / 1.8 EX DG RF aspherical	DP-FE + EXR-40	4FNS326	4FNS326 4FNS826		
Sigma AF 50 / 2.8 EX Macro	FP-90	4FNS21	4FNS321 4FNS821		
Sigma AF 70 / 2.8 EX DG Macro	FP-120 + EXR15	AF only	AF only		
Sigma AF 105 / 2.8 EX DG macro	FP-145B	4FNS20	4FNS320 4FNS820		4FCS820
Sigma 150 / 2.8 EX DG APO HSM IF MAKRO	FP-FC150S+EXR-18		4FNS515 gear included		identical
Tokina Lens (APS-C sensor = DX)		Zoom Gear operated with man. Focus control <i>SUBAL F5/N10/N80</i> <i>SUBAL D10/FS2</i> <i>SUBAL ND2/ND20</i>	Zoom Gear operated with man. Focus control <i>SUBALND3/ND30/</i> <i>ND90/ ND300/</i> <i>SUBALND600/ND7000</i> <i>ND7100/ ND800/810</i>	Zoom Gear operated with man. Focus control <i>SUBAL C40/C50</i>	Zoom Gear operated with man. Focus control <i>SUBALCD3/CD5MIII</i> <i>CD5MIII</i> <i>SUBALCD500/CD7</i>
Tokina 10-17 / 3.5-4.5 AF DX	DP-FE + EXR-18 DP100 + EXR-13	4ZTO5 (also in ND70)	4ZTO35 4ZTO835	4ZTO35 4ZTO835	4ZTO835
Tokina 10-17 / 3.5-4.5 AF DX + Kenko Teleconverter Pro 300 AF DG 1,4x	DP-FE + EXR-40 DP100 + EXR-33	4ZTO35K (Nikon only)	4ZTO35K(Nikon only) 4ZTO835K	4ZTO35K(Nikon only) 4ZTO835K	
Tokina 10-17 / 3.5-4.5 AF DX + Kenko Teleconverter Pro 300 AF DGX 2x	DP-FE + EXR-60 DP100 + EXR-55	4ZTO35K2	4ZTO35K2 4ZTO835K2	4ZTO35K2 4ZTO835K2	
Tokina 12-24 / 4 DX	DP-FE + EXR-50 DP-SWB + EXR-33	4ZTO10	4ZTO10 4ZTO810	4ZTO10 4ZTO810	
Tokina 12-24 / 4 DX II	DP-FE + EXR-50 DP-SWB + EXR-33	4ZTO10	4ZTO10 4ZTO811	4ZTO10 4ZTO811	
Tokina AF 11-16 /2.8 DX Aspherical AT-X 116 PRO DX	DP-FE + EXR-50	4ZTO11 identical!	4ZTO11 identical!		
Tokina AF 35 / 2,8 ATX Pro DX Macro	DP-FE FP-68				
Tamron Lens (APS-C sensor = Di II)		Zoom Gear operated with man. Focus control <i>SUBAL F5/N10/N80</i> <i>SUBAL D10/FS2</i> <i>SUBAL ND2/ND20</i>	Zoom Gear operated with man. Focus control <i>SUBALND3/ND30/</i> <i>ND90/ ND300</i> <i>SUBALND600/ND7000</i> <i>ND7100/ ND800</i>		
Tamron SP AF 10-24 3,5-4,5 DIII LD aspherical (IF)	DP-FE + EXR-45	4ZNTA010	4ZNTA010 4ZNTA810		

GEARS FOR OLDER LENSES ON REQUEST!

ERRORS EXCEPTED!